



STREAM VIDEO RECORDER

QUICK INSTALLATION GUIDE
ADC-SVR122

SMARTER
VIDEO
SOLUTIONS

Pre-Installation Checklist

- SVR (included)
- AC power adapter (included)
- Ethernet connection to broadband (Cable, DSL or Fiber Optic) Internet
- Login and Password for the Alarm.com account to which you will add the SVR

Add the Device to an Alarm.com Account

- 1 Using an Ethernet cable, connect the device to the network.
- 2 Connect the device's AC power adapter and plug it into a non-switched outlet. Wait for the SVR Status LED (on front) to turn solid green.
- 3 Add the device to the account by either selecting the account in MobileTech OR by using a web browser and entering the following URL: www.alarm.com/addcamera
- 4 Select the device from the video device list or type in its MAC address to begin adding the camera. The device's MAC address is located on the bottom of the device.
- 5 Follow the on-screen instructions to finish adding the device. You may associate cameras to the device from the Customer Website.

LED Reference Guide

SVR STATUS LED

Solid Green | Internet connection

Local network and Internet connection



Flashing Green | Local network connection

Local network connection only, no Internet



Solid Red | Cameras not recording or hard drive error

Check LEDs on back of SVR



Flashing Red | No connection

Check your Internet service and the Troubleshooting section




Flashing Green & Red | Factory reset



Warning: This will restore factory-default settings to the device. If already installed, the device may need to be removed from the Alarm.com account and re-added after a factory reset.

To perform a factory reset, push the Reset button and release when flashing Green and Red (about 15 seconds).

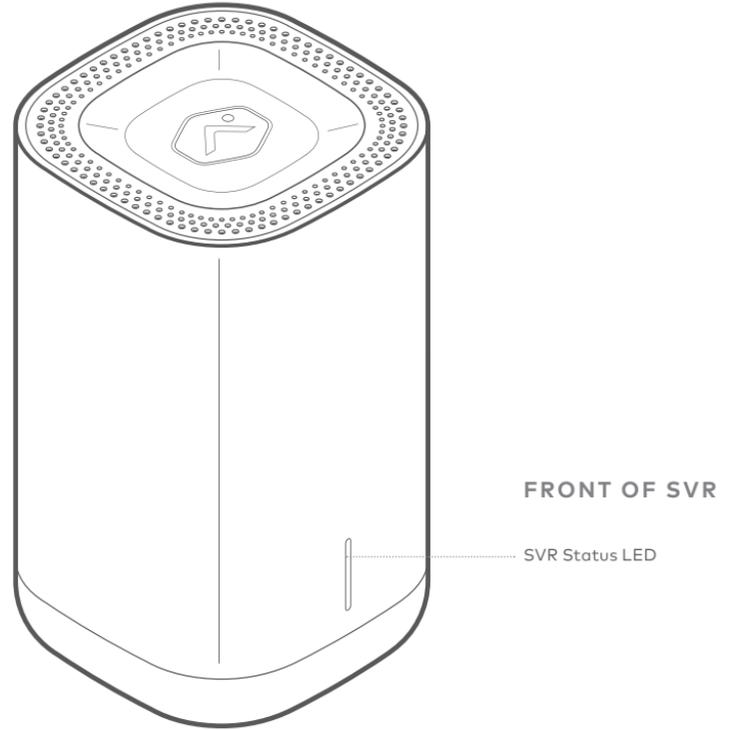

LED Reference Guide (CONT'D)

SVR HARD DRIVE

Solid Green | SVR hard drive is operating normally



Flashing Green | Hard drive is full

Normal operation, oldest footage is being deleted



Flashing Red | Hard drive configuration error

Use the Customer Website to perform diagnostics



CAMERAS 1 - 8

Solid Green | Camera is connected & recording




Flashing Green | Recording is paused

Camera is connected and recording is paused



Flashing Red | Camera not recording

Camera is disconnected or improperly configured

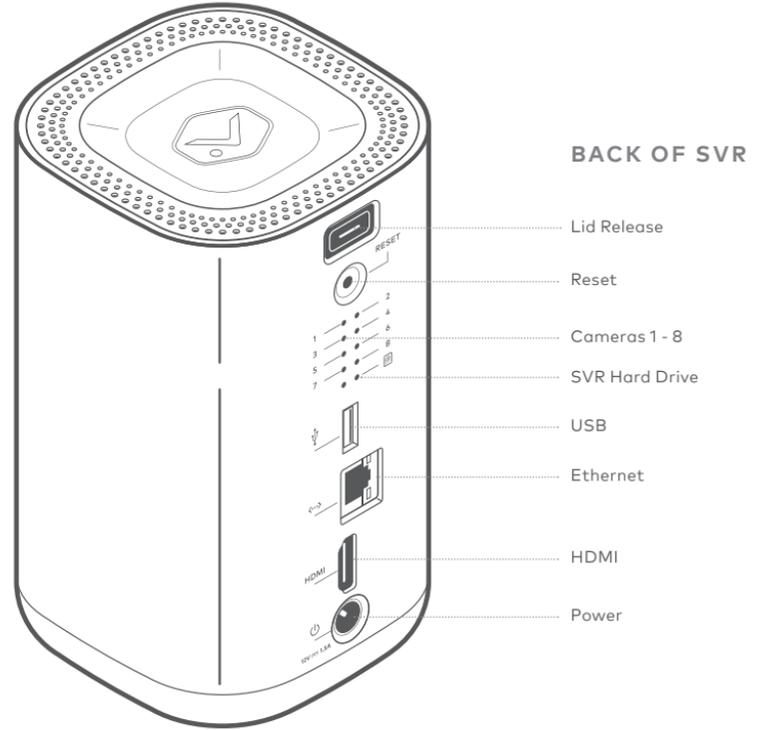

Viewing Live and Recorded Video Locally

- 1 Ensure that you have followed the setup instructions in this guide.
- 2 Using an HDMI cable, connect the SVR122 to a television or computer monitor.
- 3 Connect a computer mouse (wireless or wired) using the USB port on the SVR122.
- 4 To view the SVR122 Main Menu, move the mouse around the screen. Three icons will appear.

MAIN MENU OPTIONS

 **Layouts and Rotation**
Select different live view camera layout options and rotate camera feeds.

 **Search**
Watch recorded video and control play back speeds.

 **Settings**
View a camera's connection status, manage camera layout locations, and edit rotation settings.

Tip: Click on any camera feed to access additional control options, such as a zoom feature.

Troubleshooting

- 1 If you have issues connecting the device to the account, power cycle the device (unplug the power jack from the device and then plug it back in to restore power). Check the Ethernet cable is properly connected, and ensure the network has Internet access.
- 2 If issues persist, reset the device to factory defaults by using the Reset button located on the back of the device. Press and hold the Reset button until the SVR Status LED is flashing green and red (about 15 seconds), then release the button. The device will reboot with factory defaults. If the device was previously installed to an Alarm.com account, it will need to be deleted before it can be installed again.

QUESTIONS?

Visit alarm.com/supportcenter



ALARM.COM[®]

© 2018 Alarm.com. All rights reserved.
8281 Greensboro Drive, Suite 100
Tysons, VA 22102

180319