

Adjust the wedge type for the ADC-VDB770

Configure the ADC-VDB770 wedge type (i.e., type of mounting bracket) for optimal motion detection.

To adjust the wedge type using the Customer Website:

- 1. Log into the Customer Website.
- 2. Click Video.
- 3. Click Settings.
- 4. Using the Video Device dropdown menu, select the desired video device.
- 5. Click Video Device Info.
- 6. Using the *Wedge Type* dropdown menu, select the appropriate mounting bracket. Each mounting bracket has a letter printed on its back that corresponds with its type.
- 7. Click Save.

To adjust the wedge type using the Customer app:

- 1. Log into the Customer app.
- 2. Tap ≡.
- 3. Tap Doorbell Camera.
- 4. Tap 🌣.
- 5. Using the *Wedge Type* dropdown menu, select the appropriate mounting bracket. Each mounting bracket has a letter printed on its back that corresponds with its type.
- 6. Tap √.