

WST-242 Outdoor Wireless Contact

Installation Instructions & User Manual

Specifications

Frequency: 345 MHz

Battery: 2X 1.5V AA Lithium Cell

Battery life: up to 10 years

Magnet gap: 3 inch max

Operating Temperature: -40° to 60°C

Operating Humidity: 5-95% RH non condensing

Compatible with Honeywell receivers

Supervisory signal interval: 60 min (approx.)

Package Contents

1x Sensor

1x Magnet


2x 1" Screws for Sensor Mount

2x 1.5" Screws for Magnet Mount


2x Lithium AA Batteries

1x Manual


Component Identification

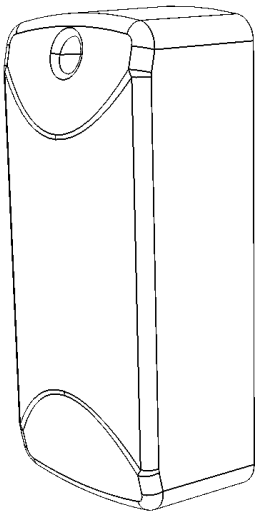


Main Sensor Body

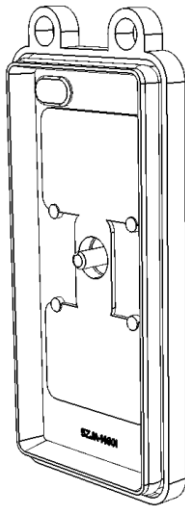

Rubber insert

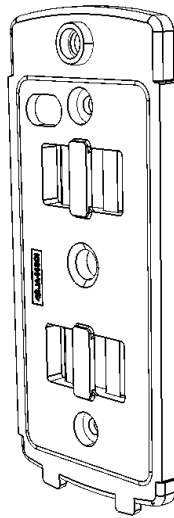

Back mounting plate

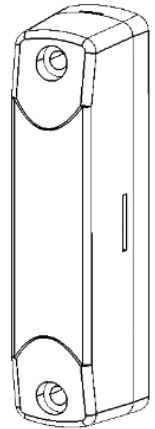

Magnet


Enrolling

To enroll the sensor, set your panel into program mode, refer to your specific alarm panel manual for details on these menus. When prompted by the panel, trigger the sensor by moving the magnet in and out of range of the sensor. The panel will beep when you have successfully learned in a sensor.

External Input: An external contact may also be connected to the WST-242 with the supplied wiring connector. The external input is located in the main sensor body near the battery terminals.

N.C is for a normally closed switch. **COM** is for common terminal. **N.O** is for normally opened switch.

The normally closed external input is transmitted as Loop 1. The built in reed switch (used with included magnet) is transmitted as Loop 2, and the normally open external input is transmitted as loop 3.

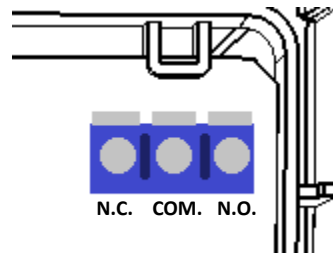


Installation


UL 634 requires that products shall be installed in accordance with the Standard for Installation and Classification of Burglar and Holdup Alarm Systems, UL 681, or with the Standard for Installation and Classification of Residential Burglar Alarm Systems, UL 1641.

Mounting Sensor & Magnet

Use screws or cable ties to secure the contact and the magnet.

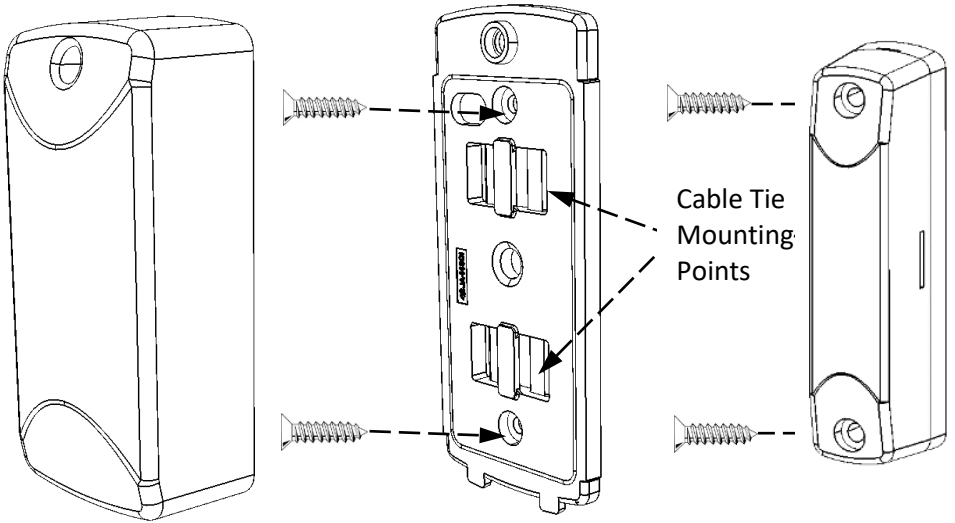

1. Determine mounting location for sensor and magnet. Take into consideration the magnet mounting location. The magnet must be facing the main sensor body marked by the 2 lines.

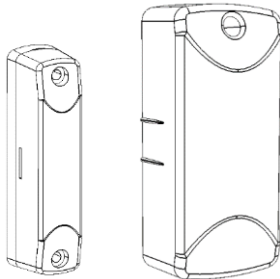

2. If using the external input, please refer to External Wiring with External Input directions.
3. Remove the back mounting plate from the main sensor body.
4. Using the mounting plate as a template, draw 2 circles for drill locations.
5. Drill two pilot hole of 3/32" at drill locations
6. Place the back mounting plate back in desired mounting location and fasten the screws into the pilot holes.
7. Use magnet mounting holes to draw 2 circles for magnet drill locations
8. Drill two pilot holes of 3/32" at drill locations
9. Place the magnet onto desired mounting location and fasten the screws into the mounting holes



Note: Suggested mounting hardware for curved surfaces

Self-locking stainless steel strap ties or extra heavy duty outdoor nylon ties. The cable tie mounting point allows up to a 0.5 inch width cable tie.

External Wiring with External Input

Note: Use a minimum of 22AWG jacked cable wire or 26AWG solid copper leads.
Maximum wire length cannot exceed 5 feet.

1. Strip cable jacket back approx. 6 inches to allow enough length when removing the sensor body from back mounting plate and rubber insert.
2. Push cable through the hole on the back mounting plate.
3. Push wire through the wire holes on the rubber insert.
4. Connect the wires on the terminal block in the main sensor body.

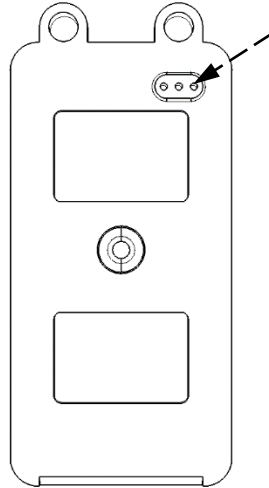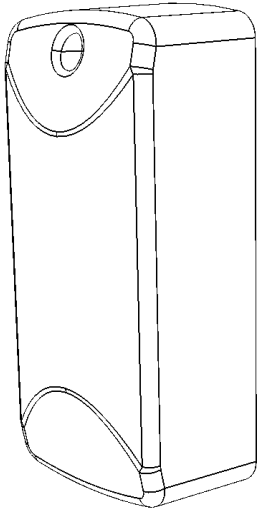


Replacing the Battery

When the battery is low a signal will be sent to the control panel. To replace the battery:

1. Detach the sensor from the back mounting plate by unscrewing the front screw.
2. Remove the rubber insert and replace the Lithium AA batteries type in the correct positive and negative orientation.
3. Re-install the rubber insert and re-fasten the sensor to the back mounting plate.

Note: Removing the sensor from the mounting plate will trigger a zone tamper signal to the control panel.

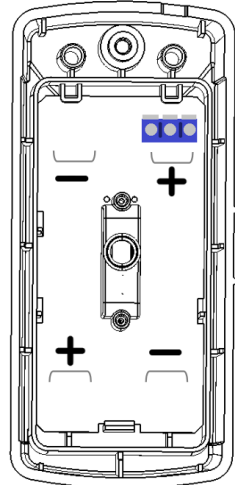

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from the receiver
- Consult the dealer or an experienced radio/TV contractor for help.

Warning: Changes or modifications not expressly approved by Ecolink Intelligent Technology Inc. could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

C'et appareil est conforme la norme d'Industrie Canada exempts de licence RSS. Son fonctionnement est soumis aux deux conditions suivantes: (1) c'et appareil ne peut pas provoquer d'interférences, et (2) c'et appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de la dispositif.

FCC ID: XQC-WST242 IC: 9863B-WST242

Warranty

Ecolink Intelligent Technology Inc. warrants that for a period of 2 years from the date of purchase that this product is free from defects in material and workmanship. This warranty does not apply to damage caused by shipping or handling, or damage caused by accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions or as a result of any unauthorized modifications.

If there is a defect in materials and workmanship under normal use within the warranty period Ecolink Intelligent Technology Inc. shall, at its option, repair or replace the defective equipment upon return of the equipment to the original point of purchase.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Ecolink Intelligent Technology Inc. neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

The maximum liability for Ecolink Intelligent Technology Inc. under all circumstances for any warranty issue shall be limited to a replacement of the defective product . It is recommended that the customer check their equipment on a regular basis for proper operation.



2055 Corte Del Nogal
Carlsbad, California 92011
1-855-632-6546
www.discoverecolink.com